

Perspective View





General Setup Instructions


- Read entire setup instruction manual prior to unpacking parts and pieces.
- The setup instructions are created specifically for this configuration.
- Setup instructions are laid out sequentially in steps, including exploded views with detailed explanation for assembly.

Cleaning & Packing


- For Cleaning Metal, Plex, & Laminate Parts: Use a MILD NON-ABRASIVE cleanser and soft cloth/paper towel to clean all surfaces.
- Keep exhibit components away from heat and prolonged sun exposure. Heat and UV exposure will warp and fade components.
- Retain all provided Packing Materials. All provided packing materials are for ease of repacking & component protection.

Disassembly

- For loss prevention, tighten all set screws and locks during disassembly.

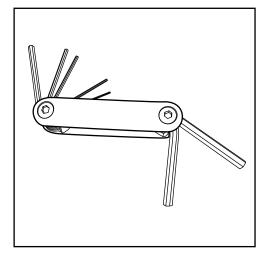

Hex Tool - Essential for Assembly

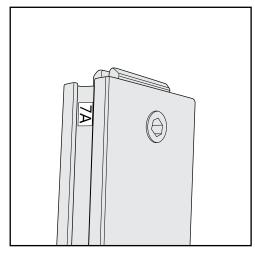


Part Identification - Numbering




MARNING

DO NOT USE POWER TOOLS

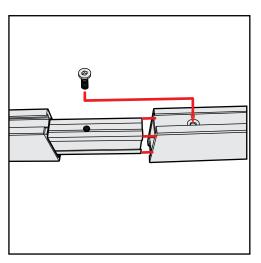

Spline Connection

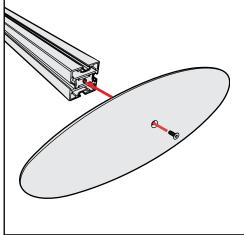


Base Plate & Extrusion Connection




LADDERS OR LIFTS MAY BE REQUIRED



ALL CONNECTIONS MUST BE TIGHTLY SECURED

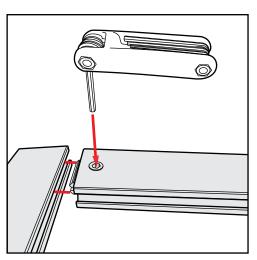

Extrusion & Lock Connection

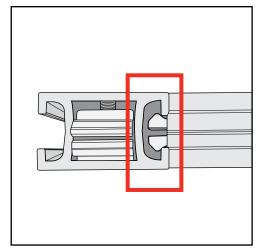


Engaged Lock





Top View of Each Level

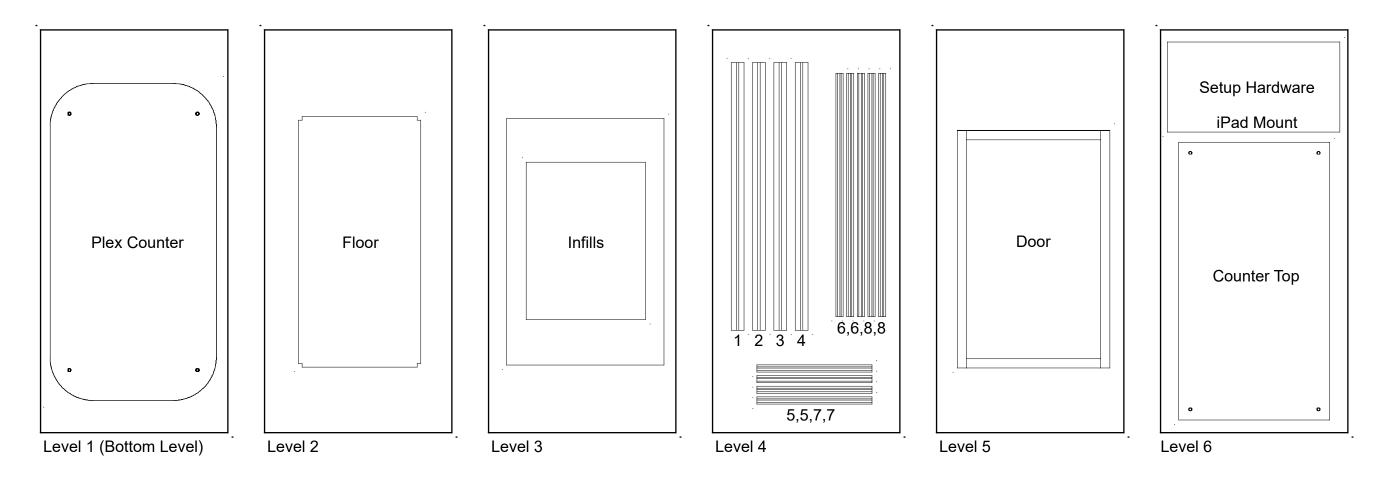





Steps:


- 1) Attach mount plate to post, using set screw.

 NOTE: Mount Plate must rotate to left and right before installing clamshell.
- 2) Attach base to post assembly, using bolt.
- 3) Attach clamshell to mount plate, using acorn nuts.
- 4) Insert iPad in clamshell, then route cords. See Cord Management for iPad detail.

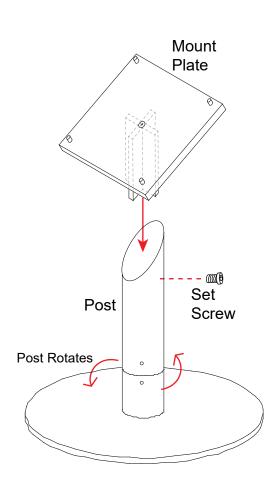

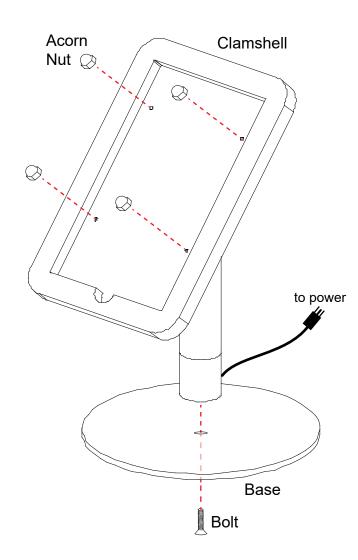


Optional Cover for Home Button

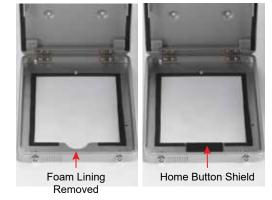


- 1) Remove foam lining from inside bottom of clamshell.
- 2) Attach Home Button Shield with double-sided tape to inside of clamshell, keeping top of shield flush with clamshell opening.

NOTE: This is a permanent fix and can't be easily removed.

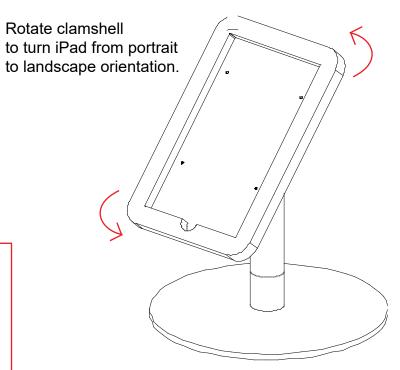

Completed Assembly



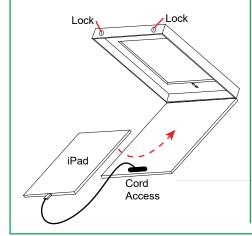



Feed iPad cord through top hole of post, then out bottom hole of post. Connect to power.




Order #XXXXX MOD-1552 Counter Assembly


tem 1 2 3	Qty. 1 1 1	Description 37.25" S44 Vertical Extrusion w/ Door Hinges 37.25" S44 Vertical Extrusion w/ Door Stop 37.25" S44 Vertical Extrusion
3 4	1 1	37.25" S44 Vertical Extrusion 37.25" S44 Vertical Extrusion
5	2	16" Z46 Horizontal Extrusion
6	2	33.775" Z46 Horizontal Extrusion
7	2	16" Z45 Horizontal Extrusion
8	2	33.775" Z45 Horizontal Extrusion

Plex Counter Attachment Plex Count Standoff Vertical Attach standoff to vertical extrusion. Secure plex counter to standoff, using screw cap.






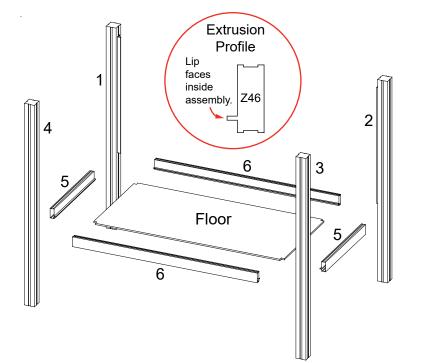


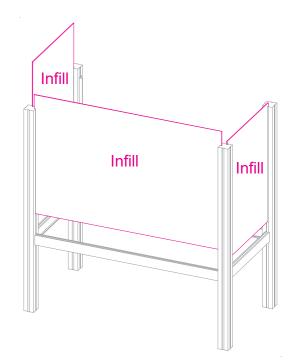


Steps:

- 1) Attach horizontals [6] between verticals [1] [2] and [3] [4].
- 2) Attach horizontals [5] between verticals [1] [4] and [2] [3].
- 3) Set floor on lips of horizontals [5] and [6].
- 4) Insert infills between verticals [1] [4], [2] [3] and [3] [4].
- 5) Attach horizontals [7] between verticals [2] [3] and [1] [4].
- 6) Attach horizontals [8] between verticals [3] and [4].
- 7) Connect assembled door. See Door Connection detail.
- 8) Set counter top on top of [7 and [8]. See Counter Top Attachment detail.
- 9) Screw threaded end of standoff barrels into the counter top.
- 10) Place plex counter on top of standoffs, then secure with screw caps. See Plex Counter Attachment detail.
- 11) Place iPad Mount on top of plex counter.

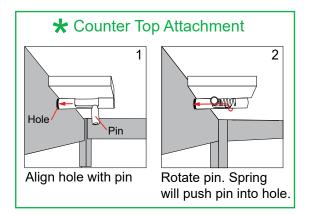

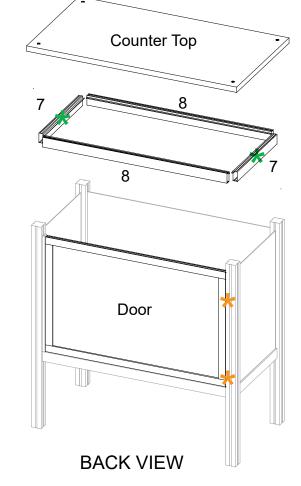

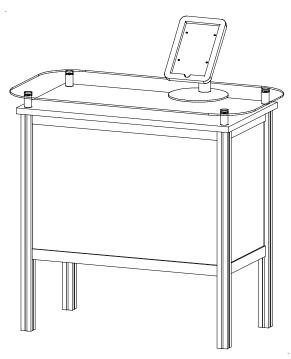

Completed Assembly

